

# LED STOP/SLOW PADDLE

## Included:

- LED Reversible Paddle (**Exhibit A**)
- 2200 mAh Lithium Ion Rechargeable
- Battery Micro USB Wall Charger
- Wrist Strap



## Operation of the LED Paddle:

1. The battery should be fully charged before use.
2. Grasp the foam handle and hold the paddle upward.
3. Press the FLASH/ON/OFF button (**Exhibit B**) above the handle to turn the functions on: Flashing, Solid Light, and Off.
4. To temporarily turn off the LEDs for power-saving mode, turn the paddle to downward position so the word "STOP" is upside down. The LEDs will automatically turn back on when the paddle is in an upright position again. \*Only for the 18" paddle.
5. When it's ready for storage, make sure the sign is powered off.



## Charging Instructions:

1. Plug the Micro-USB charger into a 120/240 VAC wall outlet.
2. Insert the Micro-USB end of the charger into the battery's charge port, located at the bottom of the handle (**Exhibit C**).
3. When the LED indicator flashes red, this means that the battery is being charged. A solid red glow indicates that the battery is fully charged.


*\*\*A discharged battery will take approximately 3-4 hours to completely charge.*

*\*\*Batteries must be fully charged at least once ever 6 months.*

## Battery Replacement:

1. Twist the battery to the left (counter-clockwise) and pull to remove.
2. Insert the new battery and twist to the right (clockwise) to lock into place.
3. The battery also functions as a power bank. Connect a USB cord to the USB port to charge your other devices.

*\*Please only use the included battery or a manufacturer's replacement.*

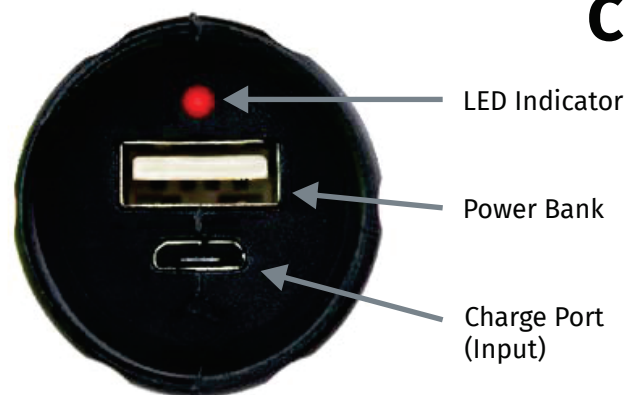

LED Indicator

Power Bank

Charge Port (Input)