


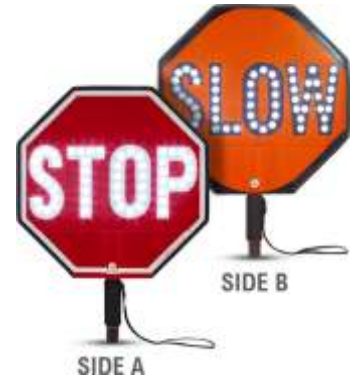

LED Stop/Slow Paddle Instructions

Included with the sign:

- LED Paddle
- 2200 mAh Lithium ion rechargeable battery
- Micro USB wall charger
- Wrist strap



Operation of the LED Paddle

- Battery should be fully charged before use.
- Grasp the foam handle and hold the paddle upward.
- Press the **FLASH/ON/OFF** button above the handle to switch between flashing, solid, and off modes. (Each side of paddle has its own control button).
- To temporarily turn off the paddle, turn the paddle in downward position (with the word "STOP" upside down) LEDs will now turn off and you will be in energy saving mode. Return the paddle to the upright position and the LEDs will illuminate automatically.
- When ready for storage, make sure the sign is powered off.

Charging Instructions

- To charge the battery, plug the Micro USB charger into a 120/240V AC wall outlet.
- Insert the Micro-USB end into the battery charge port, located at the bottom of the sign handle.
- The LED indicator on the battery will flash red. This will indicate that the battery is being charged. A discharged battery will take approximately 3-4 hours to completely charge.
- When the battery is fully charged the LED Indicator will be a steady red. You may disconnect the charger and use the sign.
- *Only use included battery or manufacturers replacement.



Battery Replacement

- Twist the battery to the left (counterclockwise) and pull to remove.
- Insert new battery and twist right (clockwise) to lock into place.
- Your sign battery also functions as a power bank. Connect a USB cord to the battery Power bank USB Port to charge other devices.

Warranty

The LED Stop Sign and accessories are subject to a 1 year warranty from date of purchase. Contact us if you have any more questions about your LED Stop Sign!